

DIAPHRAGM REPLACEMENT PROCEDURE

1. INSTALLATION



Unscrew the screws and remove the cover and the diaphragm you want to replace. It is highly recommended to clean the air gap using adhesive tape.



Prepare the new diaphragm, the cover and the screws that have just been removed. Keep the paper spacers in case you may need them.



Place the diaphragm carefully and pay attention that the washer is perfectly placed inside the socket of the top plate.



Place the cover paying special attention that the holes in the cover face the holes in the top plate to be screwed.



Place the screws and screw them progressively in the order indicated in the diagram.



Verify the compression driver (8Ω) by applying a 3.5 V amplitude signal and make a frequency sweep starting at 200 Hz up to 20 kHz.